


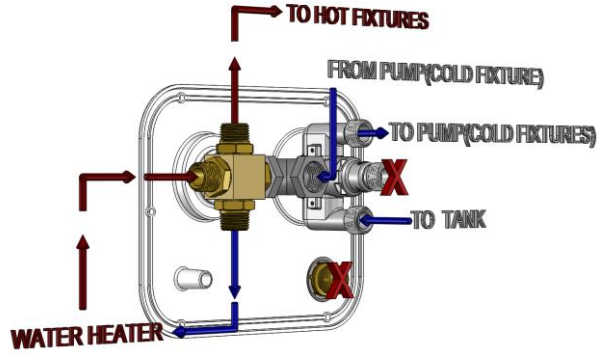


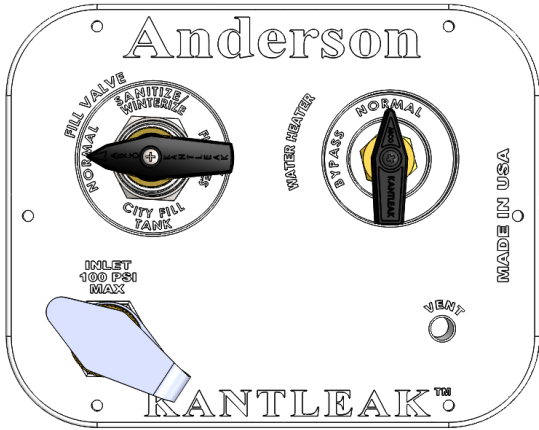



TO RUN HOT AND COLD FIXTURES FROM STORAGE TANK (VIA RV PUMP)

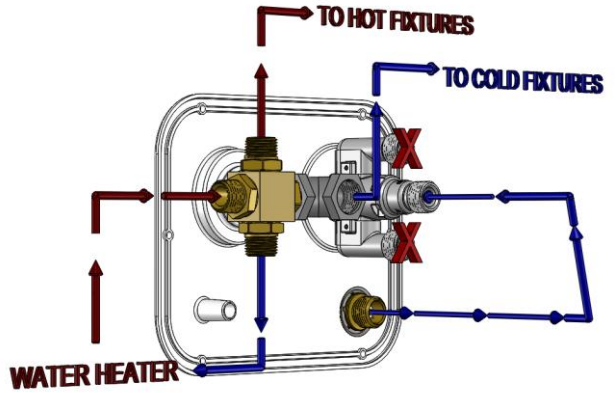



TO RUN FIXTURES FROM PRESSURIZED CITY WATER

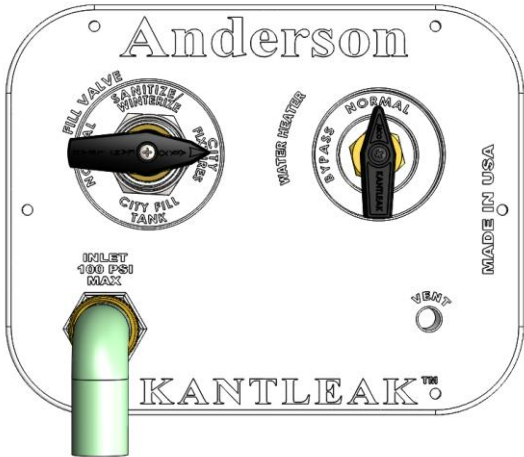

TO FILL STORAGE TANK FROM PRESSURIZED CITY WATER

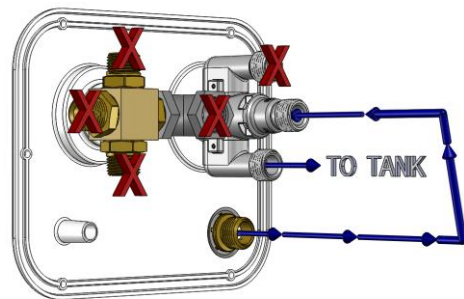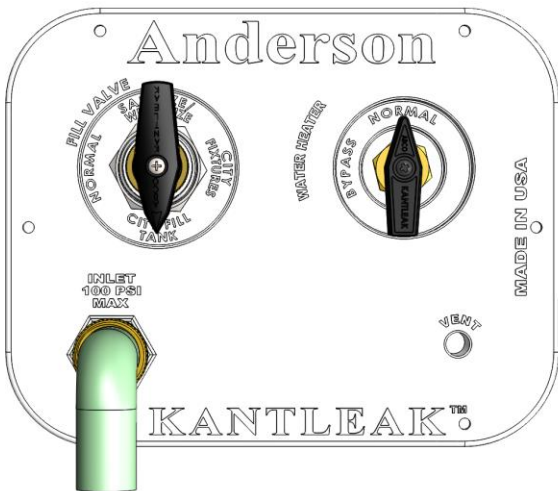

TO SANITIZE/WINTERIZE HOT AND COLD FIXTURE (NOT TANK) FROM UNPRESSURIZED SOURCE (VIA RV PUMP)

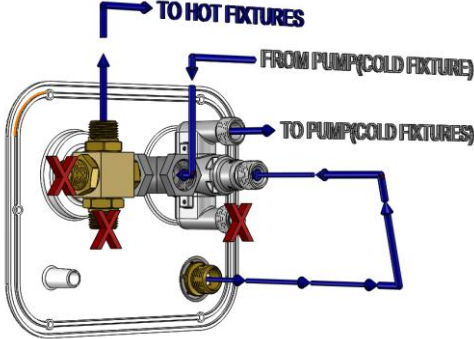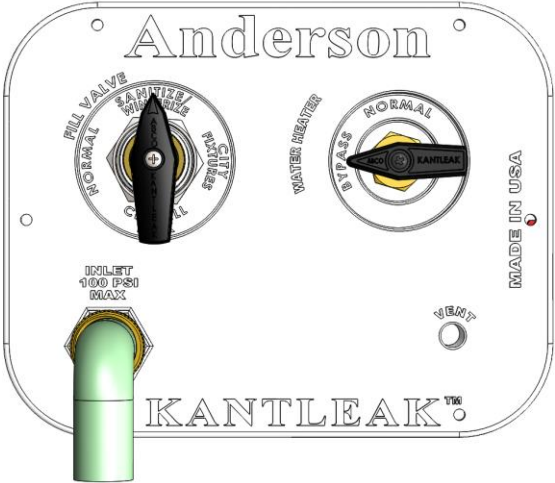

TO BYPASS WATER HEATER FOR MAINTENANCE

